

USER'S MANUAL

Item code: VICAM-AMS-FT-1000

INTEGRATED FRONT VIEW CAMERA: FENDT TRACTOR

INSTALL OUR INTEGRATED CAMERA AT THE FRONT REAR OF YOUR FENDT TRACTOR







420 TVL 12 VOLTS



Cmos 1/4





The FT-1000 MICRO CAM is an integrated camera. It can be installed in the narrowest spaces thanks to its 20mm diameter. Equipped with a 150° viewing angle, it enables an optimal front view on your machine. Delivered with an adaptor ring and a 5m extension cable.

- ADAPTED TO YOUR FENDT 1000 / 900 TRACTORS















USER'S MANUAL




USER'S MANUAL

INTEGRATED FRONT VIEW CAMERA: FENDT TRACTOR

· INSTALLATION

1. Take off the rubber plug

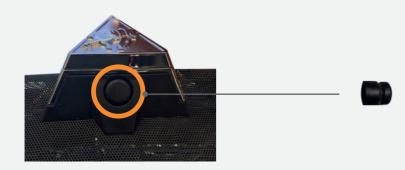

2. Install the camera from the front side in the camera location. The white dot indicates the direction of the image display.









You can connect this camera to an AMS monitor or to an integrated monitor with an adaptor cable <u>FT TRACTOR1</u> (not provided in the kit).

INTEGRATED FRONT VIEW CAMERA: FENDT TRACTOR

RECOMMENDATIONS

AMS cannot be held responsible for any modifications that may be implemented by the manufacturer on the machine. Our camera solutions are driver assistance systems. Please remain vigilant on the roads, the driver is the only responsible for his maneuvers.

WARRANTY

The product is guaranteed for two years as from the date of sale to the end user, remembering that the sale must take place within 24 months after delivery to the concession.

· AFTER SALES SERVICE

Reserved for professionals

→ Download the service from our site

When returning, please include the following documents for managing repairs and the warranty:

- → The return-authorisation form duly completed
- → A copy of the invoice with the date of sale to the end user
- → The reason for the claim, or a description of the malfunction.

For more information, contact our technical department

→ Tel: +33 (0)3 27 94 44 44 or @: contact@ams-diffusion.com

If you are the end user

Please go to your dealer.



AMS Diffusion

Tél. +33 3 27 94 44 44 Fax. +33 3 27 94 44 45 contact@ams-diffusion.com



