

FENDT ADAPTOR CABLE (HARVESTER)

· CONNECT AMS CAMERAS TO YOUR VARIOTRONIC MONITOR



Monitor
VARIOTRONIC
1 video input



Adaptor cable
FT COMBINE




AMS
Camera *

This adaptor cable enables the use of the VARIOTRONIC monitor for Fendt harvester with an AMS camera.


· CONNECTION TO THE SCREEN

1.

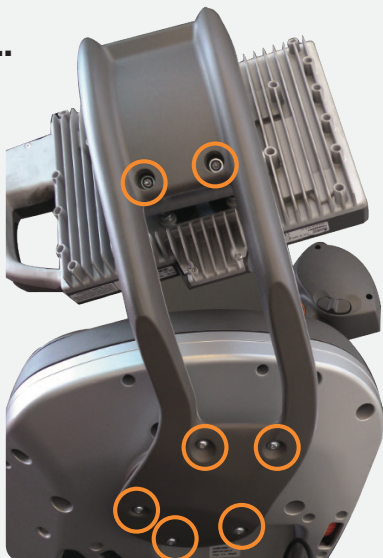


Remove the cover from the back of the monitor (remove the 7 screws)

2.

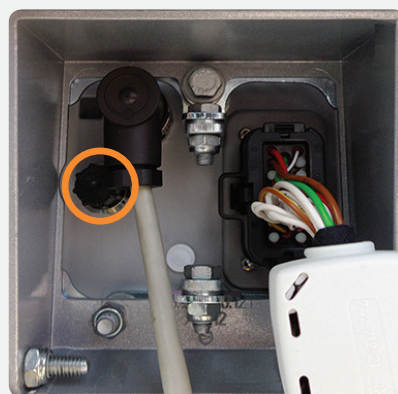

Remove the cap from the video input 2 to locate the 5-way female connector




Adaptor cable
FT COMBINE
(5 way male connector)

* Camera and original monitor are not included. All the AMS cameras are compatible with this adaptor cable (except wireless camera)

FENDT ADAPTOR CABLE (HARVESTER)

3.

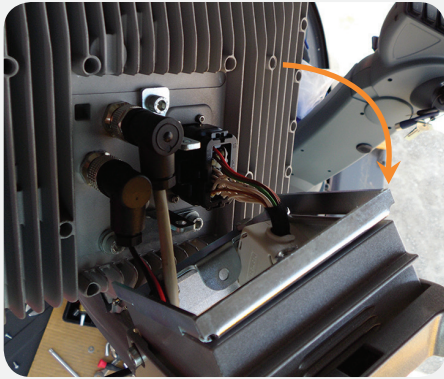

Monitor
VARIOTRONIC



Feed the cable in the bracket holding the monitor towards the armrest


Extension cable



AMS
Camera

· VISUAL DISPLAY ON THE TOUCH-SCREEN


4.

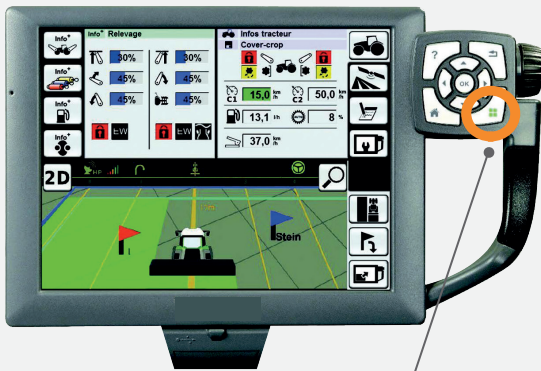

Press the Settings button




5.

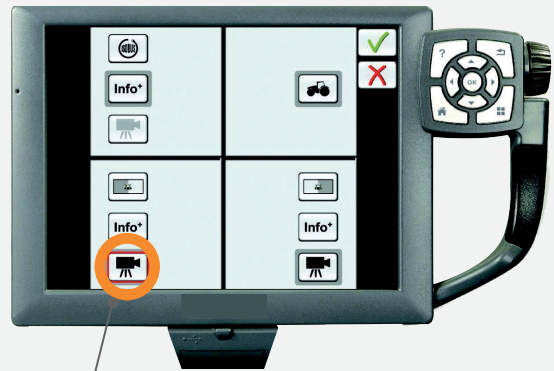

To enable the video function: press



6.

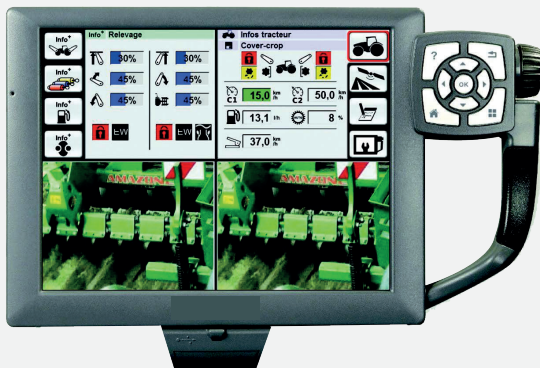

Refer to your manufacturer's handbook to change your video settings.

FENDT ADAPTOR CABLE (HARVESTER)

• RECOMMENDATIONS

If your monitor VARIOTRONIC does not have a video input management system, contact AGCO for an update of the system.

• WARRANTY

The product is guaranteed for two years as from the date of sale to the end user, remembering that the sale must take place within 24 months after delivery to the concession.

• AFTER SALES SERVICE

Reserved for professionals

→ Download the service form from our site

When returning, please include the following documents for managing repairs and the warranty:

- The return-authorisation form duly completed
- A copy of the invoice with the date of sale to the end user
- The reason for the claim, or a description of the malfunction.

For more information, contact our technical department

→ Tel : +33 (0)3 27 94 44 44 or @ : contact@ams-diffusion.com

If you are the end user

Please go to your dealer.



AMS Diffusion

Tél. +33 3 27 94 44 44

Fax. +33 3 27 94 44 45

contact@ams-diffusion.com